Staple Loading Instructions

NEU MASTER

NHT0050
3 in 1
Hand Stapler & Nailer

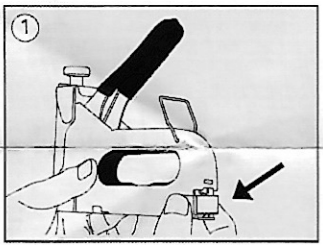

Press the slider and move it to bottom.

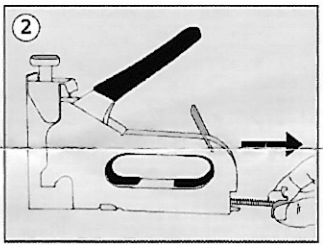

Pull out the slider.

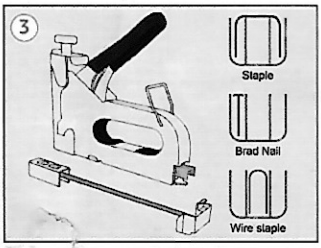

Insert the staple &
nail strip into the magazine.

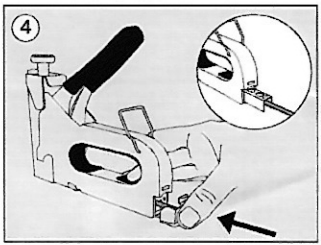

Insert the slider and push it until it lock.

Rev: 1.0

Stapler Jammed Clear Instruction

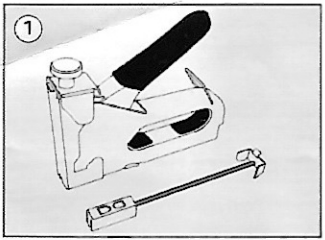

Pull out the slider.

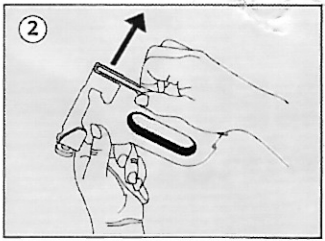

Hold both side of magazine at opening tip and pull it backward, then open the magazine outward.

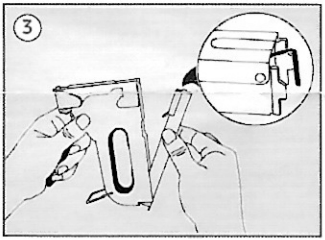

Clean the jammed fasteners with pliers.

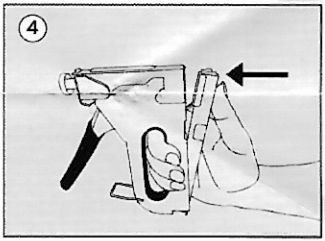

Press the magazine back into place.

Adjustable impact force knob:
Turn the bolt to a lower position, the impact force will be greater

Stanley®
TRA700 serials
ARROW® T50®
6–14mm
1/4"– 9/16"

Wire staple
ARROW® T18®
10–12mm
3/8"– 1/2"

BRAD NAIL
18 GAUGE
6–14mm
1/4"– 9/16"